

Sanitize Your Food with Electrolytic Ozone



99.99%*

Removals bacteria & viruses
*Approved by international 3rd-party labs.



Rapidly
Bactericidal



Safety

No matter how much you use

Revolutionary Ozone Food Purifier

The Biolux Ozone Food Purifier (OFP) applies patented electrolytic ozone generator technology from BES Group. Just place the OFP in a full water container, to turn ordinary turn tap water into natural sanitizer.

Compared with traditional corona discharge method, Biolux OFP provides safer dissolved ozonated water. The OFP generates ozonated water directly from water it does not produce by-products (NOx)* that are harmful to people. Ozonated water will kill the pathogens immediately and revert to oxygen and water. It's safe to use, neutral pH, and non-corrosive.

OFP can be used to maintain kitchen hygiene, food preservation, meat & seafood deodorization, and general surface sanitation, and also effectively degrade pesticide residues on the surfaces of fruits and vegetables. Ozone not only provides a safer and easier sanitation option but also controls dietary hygiene and easily protects the health of the whole family.



Model: EOS7260

THE PICTURE IS SHOWN FOR ILLUSTRATION PURPOSES ONLY.
THE ACTUAL PRODUCT MAY VARY DUE TO PRODUCT ENHANCEMENT.



*According to international authorities: Low concentrations of nitrogen oxides (NOx) may cause coughing or shortness of breath, fatigue, and nausea. When NOx reacts with water and easily form nitrous acid. Long-term exposure and use may cause cancer to the human body.

Focus Points




Pesticide residues reduction



Keep meat & seafood fresh and deodorization




General surface sanitation

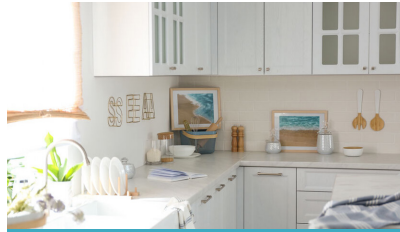

Maintain kitchen hygiene

Configuration

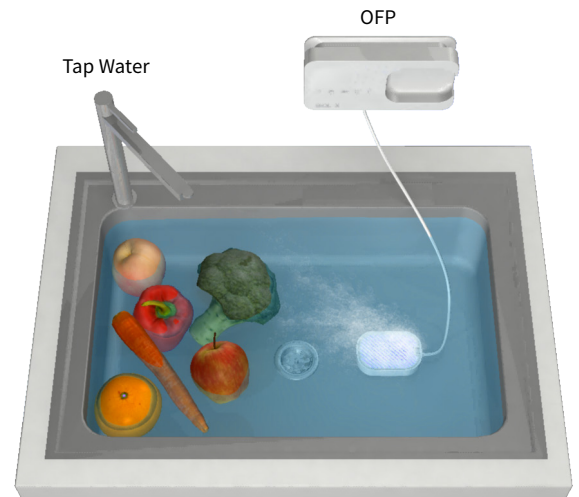

Specifications

Model No.	EOS7260
O ₃ Concentration	1.5ppm / 5L / 10min.
Power	AC 110-240V, 60 / 50Hz, DC12V
Water Quality (TDS)	TDS 60 - 250mg/l; <180ppm as CaCO ₃
Water Temperature	5 - 35°C (41 - 95°F)
Dimensions	Main controller: W280 x D70 x H100mm
	EOG: W110 x D25 x H80mm
Weight (Net)	1.6kg

Features



Inspired by Nature

Turns tap water into an effective and safe sanitizer.



Instant Start

OFFP generates ozonated water in a short time, keep running for your safety.



Chemical-free

No need to add other chemical additives.



Natural & No Residue

Provides a better quality for food safety at home.




Easy to Use

Just place OFFP in a full water container, and press the start button.

About Us

Since 1988, BES Group has been the global leader of electrolytic technology that converts water to ultra-pure ozone and hydrogen. Products applications include Food Safety, Ice & Beverage, Dentistry, Healthcare, Professional Laundry, Professional Cleaning, Maritime, and Home Sanitation & Wellness. All products and components are tested for high performance, safety, efficacy and reliability with certifications from government agencies and leading 3rd party labs.

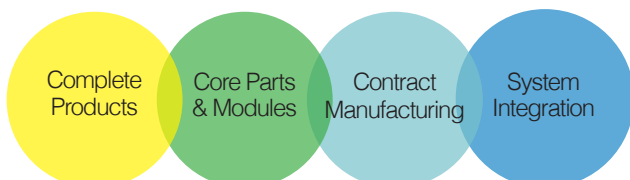

North America

BIOSURE North America, LLC.
2020 Babcock Rd., Ste. 25
San Antonio, Texas 78229 USA
www.biosureozone.com

China

Shanghai Zhongte Environmental Technology Co., LTD
Unit 205, 998 Shenbin South Road, Minhang District,
Shanghai, 201106 China
www.biosurepro.com

Taiwan

Biotek Environmental Science Ltd.
5F, 98 Xingde Rd, Sanchung Dist,
New Taipei, 24158 Taiwan
www.besgroups.com



Technologies applied are protected by one or more of the following patents:
US 8,306,914 B2, US 9,757,697 B2, US 9,248,208 B2

Oceania

BES GROUP (AUST) PTY LTD.
Ground Floor, 737 Burwood Rd,
Hawthorn, VIC 3122 Australia
www.besgroups.com.au

Asia/Headquarters

Biotek Environmental Science Ltd.
5F, 98 Xingde Rd, Sanchung Dist,
New Taipei, 24158 Taiwan
www.besgroups.com

Factory ISO 9001 Certified
Yantai United Ozonetec Corporation.
4F, 1 Wuzhishan Rd, ETDZ
Yantai, Shandong 264006 China
www.besgroup.com.cn

Member of



Registered

